



XM1283 – 433 / 868 / 915 MHz

Transceiver board with low power 8-bit microcontroller

GENERAL DESCRIPTION

The XM1283 is a radio module based on the highly integrated XE1283 combining an ISM-band radio transceiver and a low power microcontroller on one chip. The XM1283 consists of a DP1283 Drop -In Module soldered onto a DP to XM adapter.

The XM1283 transceiver module enables high data rate communication up to 152.3 kbit/s. The module is optimized for low power consumption. In transmit mode maximum output power is +15 dBm without any external power amplifier. Three frequency ranges are available to satisfy either the European (ETSI-300 220-1) or the North American (FCC part 15.231) standards.

XM modules may also be ordered as part of a Starter Kit, which includes a microcontroller interface and a PC-based graphical user interface to enable range testing and more detailed product evaluation.

ORDERING INFORMATION

Part	Version	Pin-package
XM1283-C433XEM-1	TrueRF™	Board with Antenna
XM1283-C868XEM-1	TrueRF™	Board with Antenna
XM1283-C915XEM-1	TrueRF™	Board with Antenna

KEY PRODUCT FEATURES

- Direct digital interface
- Supply voltage down to 2.4V
- Minimum external component count
- Frequency synthesizer step: 500 Hz
- Output power programmable: up to 15 dBm
- High reception sensitivity: down to -113 dBm
- Data rate from 1.2 kbit/s to 153.2 kbit/s
- Low Power consumption
- 8-bits microcontroller, RISC core
- Up to 6 MIPS, 300 uA at 1 MIPS operation
- Up to 22 kByte (8kW) MTP, 512 Byte RAM

APPLICATION CONNECTOR

The XM1283 TrueRF™ can be connected to test equipment or XEMICS' development tools via a 20 pins connector.

Pin #1

"SCK": (Output), Clock of the 3-wire interface

Pin #2

"VDD": Connect to a 3.3V power supply.

Pin #3

"SI": (Output), Data of the 3-wire interface

Pin #4

"GND": Connect to Ground

Pin #5

"SO": (Input), Data of the 3-wire interface

Pin #6

"TX": (Input), Transmitter selection of the antenna switch; not connected by default

Pin #7

NC

Pin #8

"RX": (Input), Receiver selection of the antenna switch; not connected by default

Pin #9

"SWITCH": (Input / Output), RF mode selection / indication

Pin #10

"CLKOUT": (Output), Output clock at 9.75, 4.875, 2.4375 or 1.21875 MHz

Pin #11

NC, grounded

Pin #12

"PB(0)" (Input / Output) port B pin

Pin #13

NC, grounded

Pin #14

"PB(1)" (Input / Output) port B pin

Pin #15

"PB(5)" (Input / Output) port B pin

Pin #16

"PB(2)" (Input / Output) port B pin

Pin #17

"PB(6)" (Input / Output) port B pin

Pin #18

"PB(3)" (Input / Output) port B pin


Pin #19

"PB(7)" (Input / Output) port B pin

Pin #20

"PB(4)" (Input / Output) port B pin

The microcontroller can be programmed via the "programming connector" using a XE8000MP.

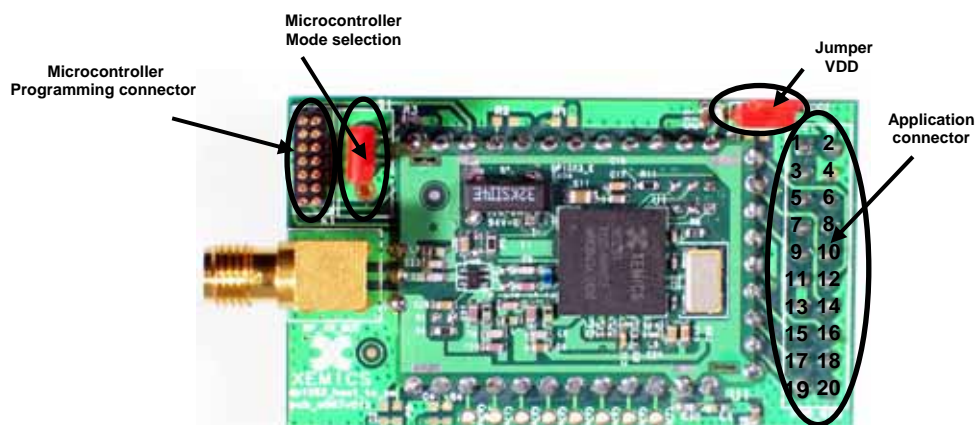

©XEMICS 2005

All rights reserved. Reproduction in whole or in part is prohibited without the prior written consent of the copyright owner. The information presented in this document does not form part of any quotation or contract, is believed to be accurate and reliable and may be changed without notice. No liability will be accepted by the publisher for any consequence of its use. Publication thereof does not convey nor imply any license under patent or other industrial or intellectual property rights.

TrueRF™ is a XEMICS trademark.